

MCP Specification

Product Version 16.6
December 2012

© 2012 Cadence Design Systems, Inc. All rights reserved.

Cadence Design Systems, Inc. (Cadence), 2655 Seely Ave., San Jose, CA 95134, USA.

Open SystemC, Open SystemC Initiative, OSCI, SystemC, and SystemC Initiative are trademarks or registered trademarks of Open SystemC Initiative, Inc. in the United States and other countries and are used with permission.

Trademarks: Trademarks and service marks of Cadence Design Systems, Inc. contained in this document are attributed to Cadence with the appropriate symbol. For queries regarding Cadence's trademarks, contact the corporate legal department at the address shown above or call 800.862.4522. All other trademarks are the property of their respective holders.

Restricted Permission: This publication is protected by copyright law and international treaties and contains trade secrets and proprietary information owned by Cadence. Unauthorized reproduction or distribution of this publication, or any portion of it, may result in civil and criminal penalties. Except as specified in this permission statement, this publication may not be copied, reproduced, modified, published, uploaded, posted, transmitted, or distributed in any way, without prior written permission from Cadence. Unless otherwise agreed to by Cadence in writing, this statement grants Cadence customers permission to print one (1) hard copy of this publication subject to the following conditions:

1. The publication may be used only in accordance with a written agreement between Cadence and its customer.
2. The publication may not be modified in any way.
3. Any authorized copy of the publication or portion thereof must include all original copyright, trademark, and other proprietary notices and this permission statement.
4. The information contained in this document cannot be used in the development of like products or software, whether for internal or external use, and shall not be used for the benefit of any other party, whether or not for consideration.

Disclaimer: Information in this publication is subject to change without notice and does not represent a commitment on the part of Cadence. Except as may be explicitly set forth in such agreement, Cadence does not make, and expressly disclaims, any representations or warranties as to the completeness, accuracy or usefulness of the information contained in this document. Cadence does not warrant that use of such information will not infringe any third party rights, nor does Cadence assume any liability for damages or costs of any kind that may result from use of such information.

Restricted Rights: Use, duplication, or disclosure by the Government is subject to restrictions as set forth in FAR52.227-14 and DFAR252.227-7013 et seq. or its successor.

Table of Contents

1	WHAT'S NEW	4
2	INTRODUCTION	5
3	MCP FILE FORMAT	6
4	MCP SAMPLES	8
4.1	MCP in a Subcircuit.....	8
4.2	MCP Sample 2	9
5	HOW SIGRITY TOOLS GENERATE MCP	12

1 What's New

Optional pin coordinates (relative to component origin) are added for alternative pin mapping method by coordinates mapping when pin name mapping fails.

2 Introduction

This document describes Sigrity Model Connection Protocol (MCP).

MCP is used for connecting circuit models and/or physical layouts among dies (chip), packages, and PCBs.

MCP allows automated model and structure connections within Sigrity products of any MCP models. It also allows third party tools to integrate or connect Sigrity models with MCP.

MCP uses a simple ASCII format that supports multiple circuits and pins for model connections and allows physical pins to be lumped in circuit models.

MCP is extensible and backward compatible.

3 MCP File Format

MCP is a block that is inserted into a host file as a comment section. It uses the host file's comment leading strings as its leading string.

The MCP block is case insensitive.

The MCP block contains one or more component connections.

The MCP block is described as follows. Here, * is used as the example of the comment leading string used in SPICE circuits.

```
* [MCP Begin]
* [MCP Ver] 1.1
* [REM] comment till the end of the line
* [Structure Type] PKG
* [MCP Source] source
* [Coordinate Unit] unit
* [Connection] compName modelName totalNumberOfPins
* [Connection Type] DIE
* [Power Nets]
* pin cktnode net x y
* ...
* pin cktnode net x y
* [Ground Nets]
* pin cktnode net x y
* ...
* pin cktnode net x y
* [Signal Nets]
* pin cktnode net x y
* ...
* pin cktnode net x y
* [MCP End]
```

[MCP Begin] and [MCP End] mark the MCP block.

The contents of the MCP block are described below.

1. [MCP Ver] *1.1* is a one-line item. It specifies the version of MCP. It is a required item.
2. [REM] *comment* is the MCP comment. It is a one-line item. The comment can also be in the form from the host, except in the net list section. In the net list sections, the comment must be in the form of MCP comments.
3. [Structure Type] *PKG* specifies the type of the extracted circuit model. It is a one-line item. It is optional. It can be a combination of the following (delimited by spaces) DIE, PKG, PCB.
4. [MCP Source] *source* specifies the origin of the circuit model. It is a one-line item. It can include the tool name, the tool version, and/or the date the model was created. This item is optional.
5. [Coordinate Unit] *unit* defines the unit used by the coordinates. *unit* can be one of the following, m, cm, mm, um, nm, mil. The default is m. This item is optional.
6. [Connection] *compName modelName totalNumberOfPins* starts a component connection section in the MCP block. It is a one-line item. This item is required. An MCP block should contain at least one component connection section. In the item, *compName* is the name of the component connection (or circuit name in SPD file, or reference designator in common layout tools); *modelName* is the model definition name of the component connection (or part number in common layout tools); and the *totalNumberOfPins* is the number of pins in this component connection. A new [Connection] line ends the previous component connection section and starts a new component connection section.
7. [Connection Type] *DIE* specifies the type of the component connection. It is a one-line item. It is optional. It can be a combination of the following (delimited by spaces) DIE, PKG, PCB, VRM, or SINK.
8. [Power Nets] starts the power pin section of the component. It is a one-line item. It is optional.
9. *pin cktnode net x y* lists the information for a pin. *pin* is the name of the pin. *ctknode* is the circuit node name used in the extracted circuit corresponding to the pin. *net* is the net of the pin. *x y* are optional and are the relative coordinates of the pin relative to the component origin. The five fields should be in one line.
10. [Ground Nets] starts the ground pin section of the component. It is a one-line item. It is optional.
11. [Signal Nets] starts the signal pin section (ends the [Power Nets] or [Ground Nets] section if exists) of the component connection. It is a one-line item. It is optional.
12. In the Power/Ground/Signal pin sections, comments must be in the MCP comment form as * [REM] *comment*.

4 MCP Samples

4.1 MCP in a Subcircuit

.subckt SigrityModel list_of_external_nodes

* The following is the MCP Section

* [MCP Begin]

* [MCP Ver] 1.1

* [MCP Source] Sigrity XtractIM 1.3.1 12/31/2007

* [Coordinate Unit] um

*

* The following is the info for component connection U1

* [Connection] U1 Si_fc_die_3000 3000

* [Connection Type] *DIE*

* [REM]

* [REM] -----Power Pin List of U1-----

* [REM]

* [Power Nets]

* VDD01 CKT01 NET1 0 0

* VDD02 CKT02 NET1 200 0

* [REM]

* [REM] -----Ground Pin List of U1-----

* [REM]

* [Ground Nets]

* [REM] Pins of net NET2

* VSS01 CKT03 NET2 100 0

* VSS01 CKT04 NET2 300 0

* ...

* [REM]

* [REM] -----Signal Pin List of U1-----

* [REM]

* [Signal Nets]

* SIG01 CKT05 NET3 500 300

* SIG01 CKT06 NET3 300 500

* ...

*

* [MCP End]
 * This concludes the MCP section

- *Contents of the subckt*

.ends

4.2 MCP Sample 2

The following package extraction example uses net-based approach (vs. per pin model) where all the ground pins are lumped as one circuit node in each circuit connection.

```
.SUBCKT                psi_pkg_wb_pre-layout_032609_173742
+                      die_1
+                      die_6
+                      die_3
+                      die_4
+                      BGA_VDD25
+                      BGA_VDD125
+                      BGA_1
+                      BGA_2
+                      die_GND1
+                      die_GND1
+                      die_GND1
+                      die_GND1
+                      BGA_GND2
+                      BGA_GND2
+                      BGA_GND2
+                      BGA_GND2
```

*The following is the Sigrity MCP(model connection protocol) Section

*[MCP Begin]

*[MCP Ver] 1.0

*[MCP Source] Sigrity PowerSI 8.1.32 3/26/2009

*

*

*[Connection] BGA BGA 21

*[Power Nets]

* 3 BGA_VDD25 VDD25

* 4 BGA_VDD25 VDD25

* 5 BGA_VDD25 VDD25

* 6 BGA_VDD25 VDD25
* 7 BGA_VDD25 VDD25
* 8 BGA_VDD25 VDD25
* 9 BGA_VDD25 VDD25
* 19 BGA_VDD125 VDD125
* 20 BGA_VDD125 VDD125
* 21 BGA_VDD125 VDD125

*

*[Ground Nets]

* 10 BGA_GND2 GND
* 11 BGA_GND2 GND
* 12 BGA_GND2 GND
* 13 BGA_GND2 GND
* 14 BGA_GND2 GND
* 15 BGA_GND2 GND
* 16 BGA_GND2 GND
* 17 BGA_GND2 GND
* 18 BGA_GND2 GND

*

*[Signal Nets]

* 1 BGA_1 DATA1
* 2 BGA_2 DATA2

*

*[Connection] die die 6

*[Power Nets]

* 1 die_1 VDD25
* 6 die_6 VDD125

*

*[Ground Nets]

* 2 die_GND1 GND
* 5 die_GND1 GND

*

*[Signal Nets]

* 3 die_3 DATA1
* 4 die_4 DATA2

*

*[MCP End]

*

*This concludes the MCP section

*Define the S element, the Model file is output from BNP

```
.MODEL Spara S
+          BNPFILE = "psi_pkg_wb_pre-layout.bnp"

S
+          die_1          die_GND1
+          die_6          die_GND1
+          die_3          die_GND1
+          die_4          die_GND1
+          BGA_VDD25      BGA_GND2
+          BGA_VDD125     BGA_GND2
+          BGA_1          BGA_GND2
+          BGA_2          BGA_GND2
+          MNAME = Spara

*
.ENDS
*
*
```

5 How Sigrity Tools Generate MCP

This section introduces some guidelines used in Sigrity tools to generate MCP.

1. Always output the **[MCP Source]** section.
This section contains the tool name, the tool version, and the date when the model has been created in this section.
2. For the **[Connection]** *compName modelName totalNumberOfPin*:
 - *compName* is the circuit name.
 - *modelName* is the circuit model definition name.
 - *totalNumberOfPins* is derived from the external node number if the model definition has external nodes, otherwise use the number of linkages instead.
3. **[Connection Type]** is optional.
If you are not sure about the connection type, skip this section.
4. How to choose pin names:
 - If the package node connects to one circuit node, use the circuit node as the pin name.
 - If the package node connects to more than one circuit node or does not connect to any circuit node, use the pin field of the package node as the pin name.
 - If the package node does not connect to any circuit node and does not have pin field either, create a unique name (number) as the pin name.